

INSTALLATION MANUAL PROJECTOR ARM B-24

First of all congratulations for your choice.

We are pleased to showcase you this universal video projector ceiling bracket, which is easy to install and can be used for nearly all LCD and DLP projectors up to 15 Kg. Before you install the ceiling bracket, read all instructions carefully and follow the installation procedures step by step.

Inside the packaging you will find the following items:

A - 01 ceiling mounting plate



B - 01 plate for central joint



C + D - 01 central joint



E - 01 column 248 mm. long



F - 08 mounting plates for the spider system - measures: 85x23 mm. (LxW)



G - 02 socket head screws 6x16 mm.



H - 08 socket head screws 5x6 mm.



I - 04 knurled socket head screws 6x10 mm.



J - 04 crowned head screws 3x10 mm. (diameter x length)



- 04 crowned head screws 4x10 mm. (diameter x length)



- 04 crowned head screws 5x10 mm. (diameter x length)



K - 01 flanged nut M6



L - 04 washers



STEP 1

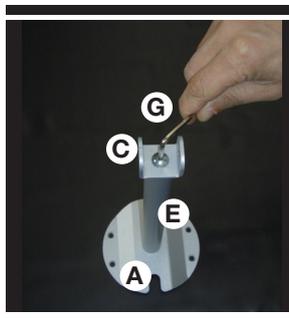


Fig. 2

Take items (A), (E), (C) and (G) like in fig. 2. Mount (A), (C) and (E) using the 2 screws (G).

In case you would like not to use the column, please follow the instructions under Step 1/B at page 2.

STEP 2

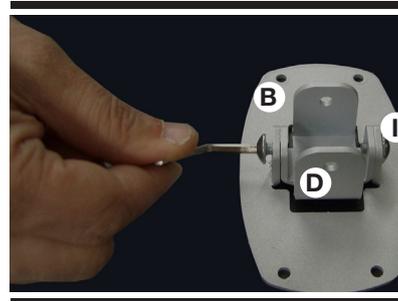


Fig. 3

Take items (B) and (D) and join them with two screws (I), like on Fig. 3.

STEP 3

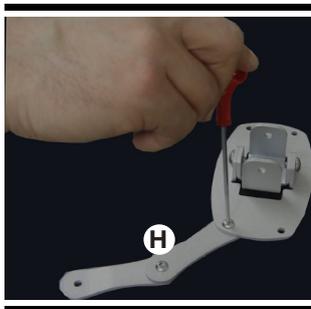


Fig. 4

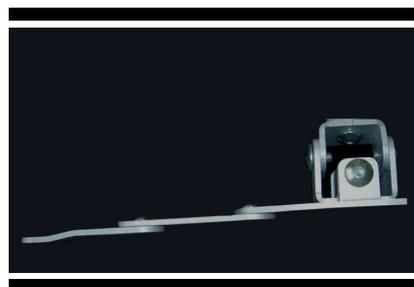


Fig. 5

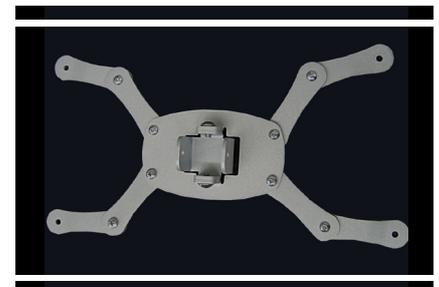


Fig. 6


Join the mounting plates using the socket head screws (H), in order to create the spider system (Fig. 6) that will enable you to fix the bracket to the projector.

NOTE: You will find 4 straight plates and 4 "S" form plates (convex shape).

First you should mount the straight plates to (B) and afterwards you can proceed with the "S" form plates.

In order to mount correctly the "S" form plates, the convex part of the S" should result downwards (see Fig. 5).

STEP 1/B

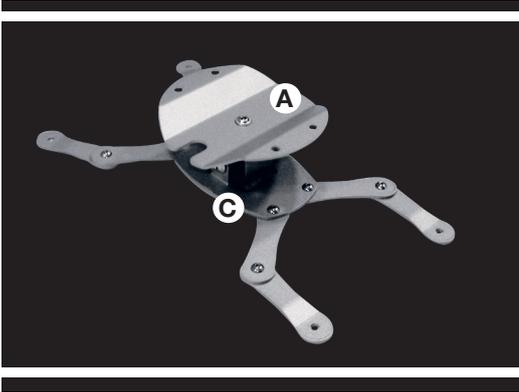

Take (A) and (C) and screw them together using one socket head screw (G) and a flanged nut M6 (K).

STEP 4



Fig. 7



Fig. 8

Mount the spider system on the projector using the supplied crowned head screws (J)
See Fig. 7 and 8.

STEP 5



Take plate with column and mount them on the ceiling using suitable screws (**not included in the packaging**).

After that, you can join projector with spider system to the fixed plate and column, using the remaining two screws (I).



WARNING

- 1) Before installing the bracket, check that you have assembled it correctly according to all the mentioned steps.
- 2) Check that the ceiling is suitable to fix and support the weight of the bracket and the projector.
- 3) Maximum projector weight you can install with Projector Arm B-24 is 15 Kg.
- 4) In case some of the parts inside the packaging are missing, **do not use alternative components in order to fix the projector** but contact immediately your dealer.
- 5) In case the instructions are not clear or if you have any doubt how to assemble the bracket, please contact your dealer.
- 6) After the installation, please keep all parts not used for a next installation.