

INSTALLATION MANUAL FOR MAJOR PRO-C WALL MOUNTING BRACKETS

Number of wall mounting brackets needed:

- THREE for Major Pro-C up to 600 cm. and Major Pro-C Tensioned up to 550 cm. of width
- FOUR for Major Pro-C larger than 600 cm. and up to 700 cm. and Major Pro-C Tensioned larger than 550 cm and up to 650 cm. of width

Inside the packaging you will find:

- Three or four wall mounting brackets (depending on the screen size)
- Four bolts for each bracket
- Four washers for each bracket
- Four nuts for each bracket



* In case you use the optional wall mounting brackets to mount the Major Pro-C to the wall you do not have to use the ceiling mounting plates included in the packaging.

WARNING: USE ALL THE WALL MOUNTING BRACKETS PROVIDED IN ORDER TO INSTALL THE SCREEN. THE LEFT AND RIGHT MOUNTING BRACKETS HAVE TO BE FIXED AT THE SAME DISTANCE FROM EACH END SIDE OF THE CABINET. THE FIXING DISTANCE HAS TO BE MAXIMUM 30 CM. FROM LEFT AND RIGHT SIDES OF THE CABINET.



Fig. 1

STEP 1

Mount the wall mounting brackets to the wall like shown in Fig. 1, using screws and wall plugs (not supplied) specific for the type of material to drill.

Take care to position at a right distance and to align the wall mounting brackets perfectly horizontal using a spirit level.



Fig. 2

STEP 2

Insert into the upper housing splines the nuts with washers and bolts.

Lift up the Major Pro-C screen and position it under the wall mounting brackets, taking care to place first the rear side of the housing against the brackets and afterwards position the housing horizontally.

In this way, the tab along all the rear part of the cabinet has to be positioned above the bottom part of the wall mounting bracket (see arrow in Fig. 3).

Now slide and fix tightly the bolts with nuts and washers to the brackets as shown in Fig. 2.

Each bracket has to be fixed with FOUR bolts.



Fig. 3