# INSTRUCTION MANUAL

FALSE CEILING TRIM KIT (FCK)

# COMPACT


# ORIGINAL INSTRUCTIONS IN ITALIAN LANGUAGE Translation into English language


## **INDEX**


COMPONENTS INSIDE THE PACKAGING - FCK COMPACT	page.	4
DIMENSIONS - FCK COMPACT	page.	5
ASSEMBLING - FCK COMPACT	page.	6
MOUNTING TO THE CEILING - FCK COMPACT	page.	7
MOUNTING THE SCREEN ONTO THE FCK	page.	9


# COMPONENTS INSIDE THE PACKAGING FCK COMPACT

When you open the packaging, please CHECK that it contains ALL the components below. In case, one or more components are missing, please refer to the dealer you purchased the product from.

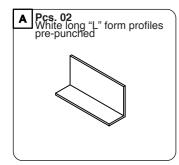


 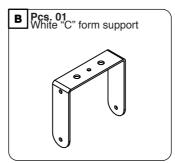


 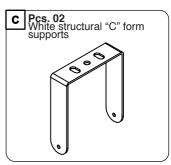


 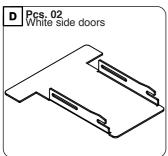


 


 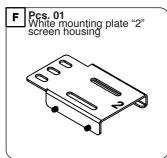






 















## **DIMENSIONS - FCK COMPACT**

#### FRONT VIEW FCK COMPACT

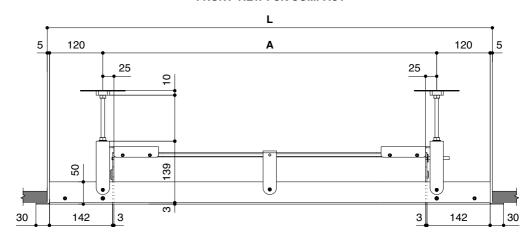

#### FIXING POINTS DIMENSIONS OF CEILING MOUNTING PLATE

 
	A (mm)	B (mm)
COMPACT PROFESSIONAL (Without borders)	Width of Viewing Area + 115	82
COMPACT HÓME CINEMA (With side borders of 50 mm)	Width of Viewing Area + 215	82
COMPACT TENSIONED	Width of Viewing Area + 405	82

#### 


#### **DIMENSIONS HOLE IN FALSE CEILING**

	L (mm)	<b>P</b> (mm)
COMPACT PROFESSIONAL (Without borders) COMPACT HOME CINEMA	Width of Viewing Area + 365	130
COMPACT HOME CINEMA (With side borders of 50 mm)	Width of Viewing Area + 465	130
COMPACT TENSIONED	Width of Viewing Area + 655	130


# TOP VIEW CEILING MOUNTING PLATE




# HOLE IN FALSE CEILING AND FIXING POINTS CEILING

 


## **ASSEMBLING - FCK COMPACT**

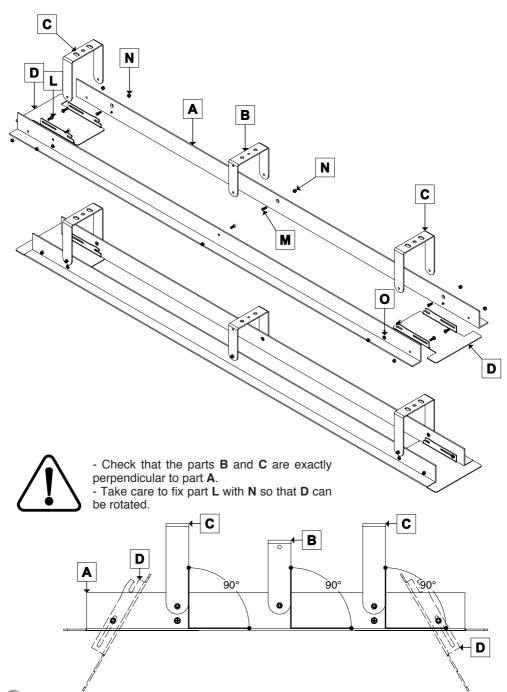

# MOUNTING TO THE CEILING - FCK COMPACT

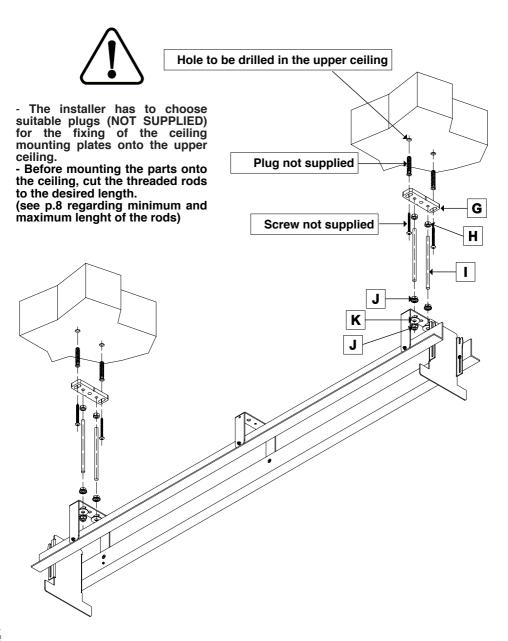



In order to fix the threaded rods (I) to the ceiling mounting plates (G), screw a bolt (H) for at least 20 mm. To the top part of the threaded rod. Screw the threaded rods in the ceiling mounting plates, making sure that the thread is inserted through all the depth of the plate (10mm). Then, clamp the bolt tightly.

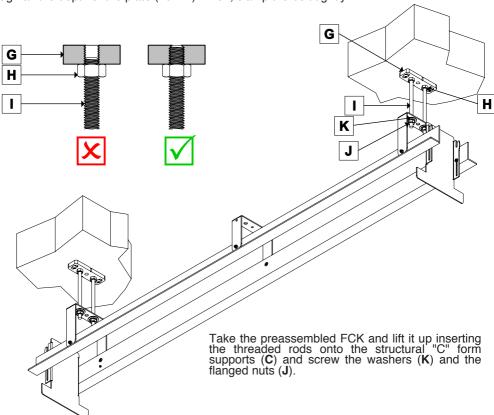



Verify that the bottom part of the FCK is perfectly leveled. A non leveled installation of the FCK will cause bad functioning of the projection screen.

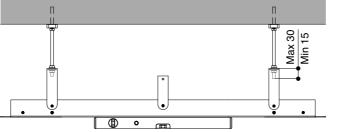


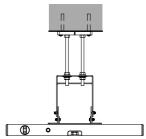


### MOUNTING THE SCREEN ONTO THE FCK




Before you proceed with mounting the screen, fix the mounting plates (E) and (F), as indicated in the drawing below. It is IMPORTANT to mount the right plate to the right side.

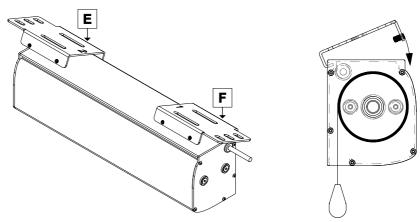


Before fixing the screws, check that the mounting plates  $(\mathbf{E})$  and  $(\mathbf{F})$  are positioned towards the end of the screen housing.

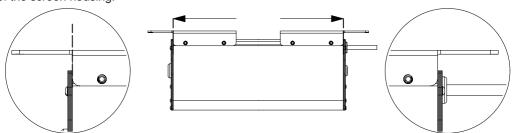


Now fix the all the screws tightly and check that both mounting plates are firmly fixed to the screen housing.

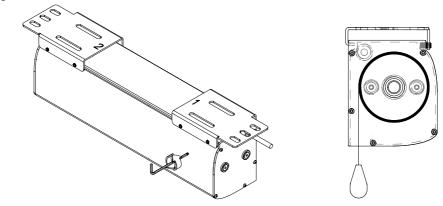




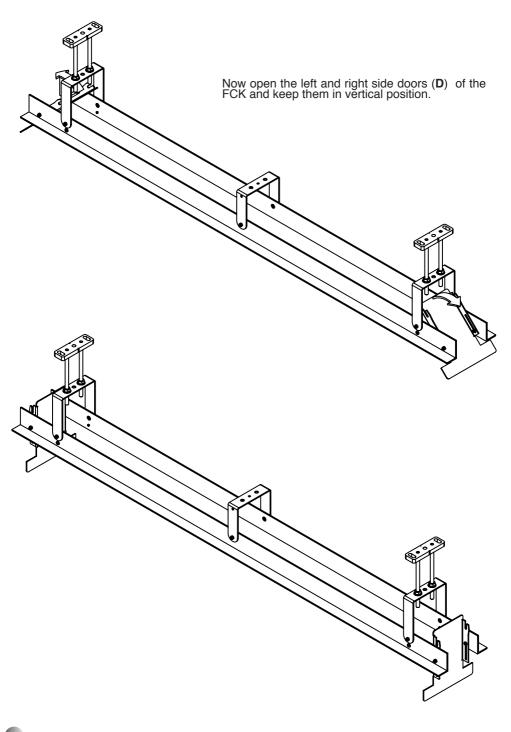


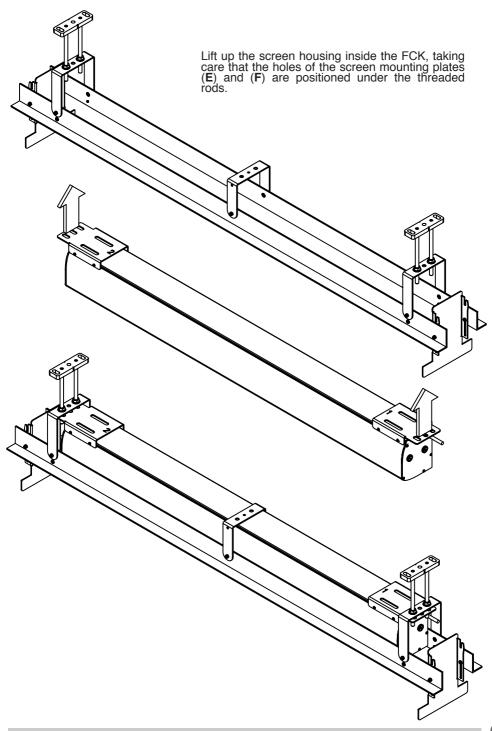


Fix the screen mounting plates to the threaded rods by using the nuts  $(\mathbf{J})$  for each threaded rod at each side.

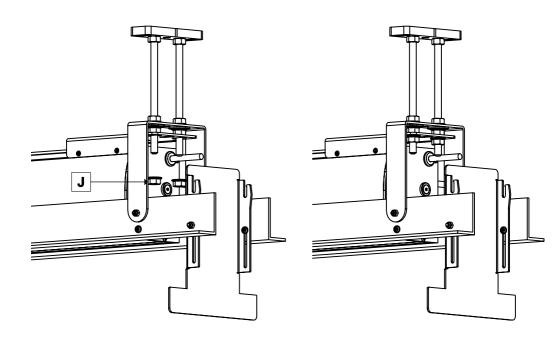

Before tightening the nuts, please check that the housing is perfectly centered with the FCK. Now, tighten firmly the flanged nuts  $(\mathbf{J})$ .

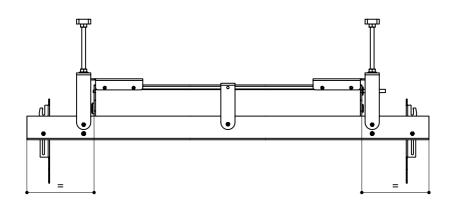

Now you can make the electrical connection of the screen motor and close the side doors.

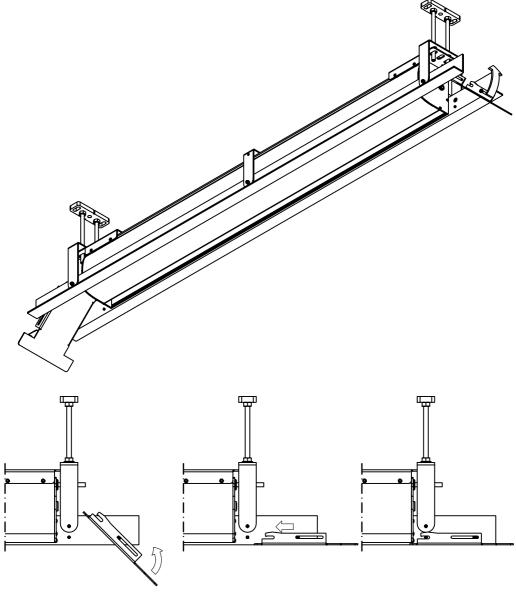

Produttore/Manufacturer/Hersteller/Produtor

Euroscreen Srl – Via Stiria, 45/16 – 33100 Udine – Italy – VAT n. IT02162500306