
## INSTRUCTION MANUAL

FALSE CEILING TRIM KIT (FCK)

## **MAJOR**

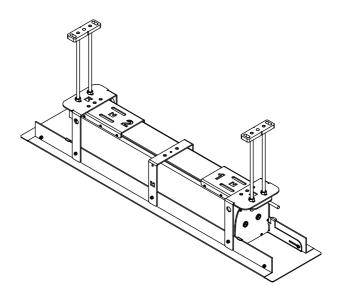


# ORIGINAL INSTRUCTIONS IN ITALIAN LANGUAGE Translation into English language


## **INDEX**


COMPONENTS INSIDE THE PACKAGING - FCK MAJOR	page.	4
DIMENSIONS - FCK MAJOR	page.	5
ASSEMBLING - FCK MAJOR	page.	6
MOUNTING TO THE CEILING - FCK MAJOR	page.	7
MOUNTING THE SCREEN ONTO THE FCK	page.	9

# COMPONENTS INSIDE THE PACKAGING FCK MAJOR

When you open the packaging, please CHECK that it contains ALL the components below. In case one or more components are missing, please refer to the dealer you purchased the product from.

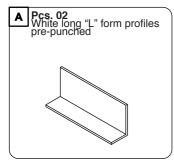


 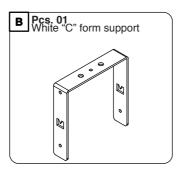


 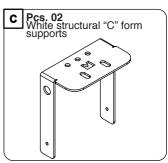


 


 


 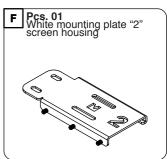






 














### **DIMENSIONS - FCK MAJOR**

#### FRONT VIEW FCK MAJOR

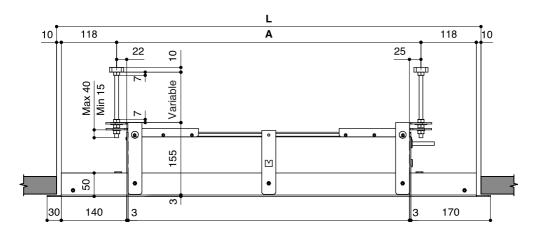

#### SIDE VIEW FCK MAJOR

#### FIXING POINTS DIMENSIONS OF CEILING MOUNTING PLATE

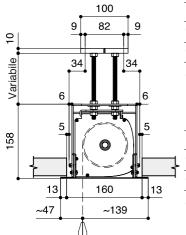


	A (mm)	B (mm)
MAJOR PROFESSIONAL (Without borders)	Width of Viewing Area + 130	82
MAJOR HOME CINEMA (With side borders of 50 mm)	Width of Viewing Area + 230	82
MAJOR TENSIONED	Width of Viewing Area + 422	82

#### **DIMENSIONS HOLE IN FALSE CEILING**

 
	L (mm)	P (mm)
MAJOR PROFESSIONAL  (Without borders)  MAJOR HOME CINEMA	Width of Viewing Area + 385	160
MAJOR HOME CINEMA (With side borders of 50 mm)	Width of Viewing Area + 485	160
MAJOR TENSIONED	Width of Viewing Area + 677	160

## TOP VIEW CEILING MOUNTING PLATE




RELEASE ER2024 03 11

## HOLE IN FALSE CEILING AND FIXING POINTS CEILING

 


## **ASSEMBLING - FCK MAJOR**

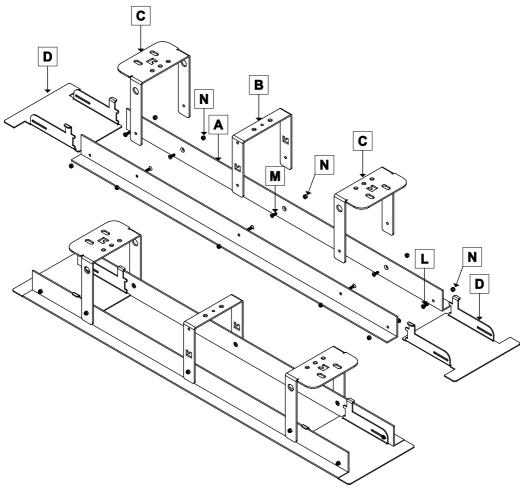




- Check that the parts  ${\bf B}$  and  ${\bf C}$  are exactly perpendicular to part  ${\bf A}.$  Take care to fix part  ${\bf L}$  with  ${\bf N}$  so that  ${\bf D}$  can be rotated.

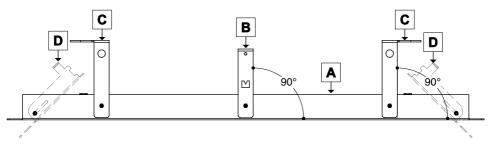


### MOUNTING TO THE CEILING - FCK MAJOR

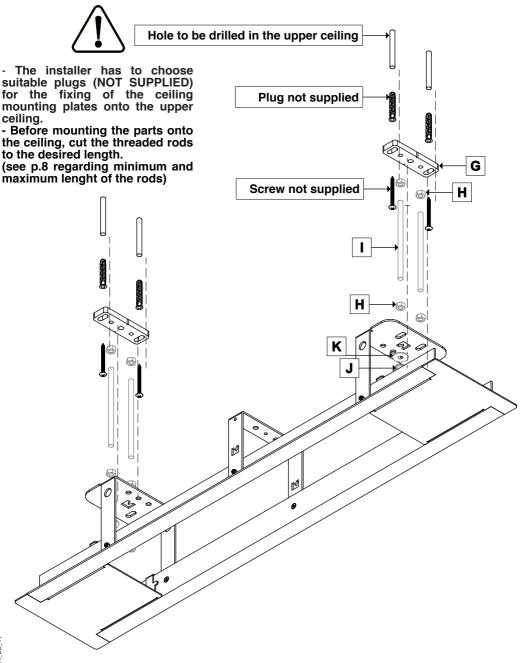


In order to fix the threaded rods (I) to the ceiling mounting plates (G), screw a bolt (H) for at least

20 mm. To the top part of the threaded rod. Screw the threaded rods in the ceiling mounting plates, making sure that the thread is inserted through all the depth of the plate (10mm). Then, clamp the bolt tightly.

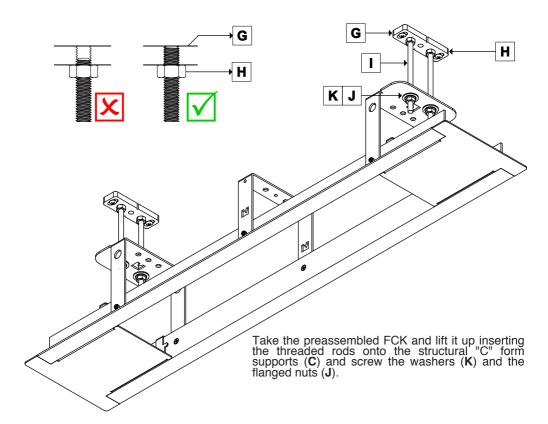





Verify that the bottom part of the FCK is perfectly leveled. A non leveled installation of the FCK will cause bad functioning of the projection screen.

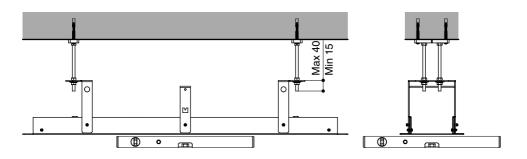


## MOUNTING THE SCREEN ONTO THE FCK

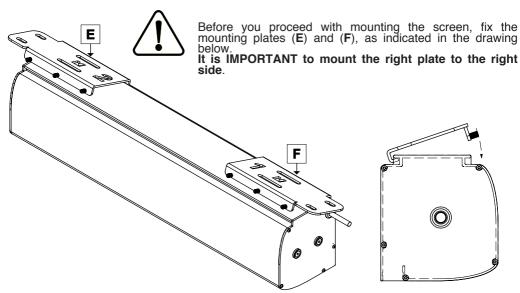


 
Before fixing the screws, check that the mounting plates (E) and (F) are positioned towards the end of the screen housing.




Now fix the all the screws tightly and check that both mounting plates are firmly fixed to the screen housing.

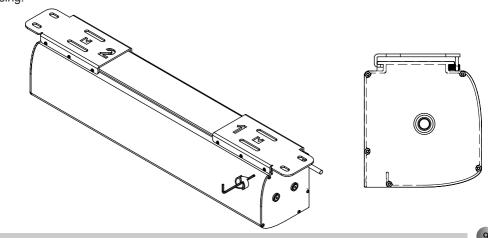

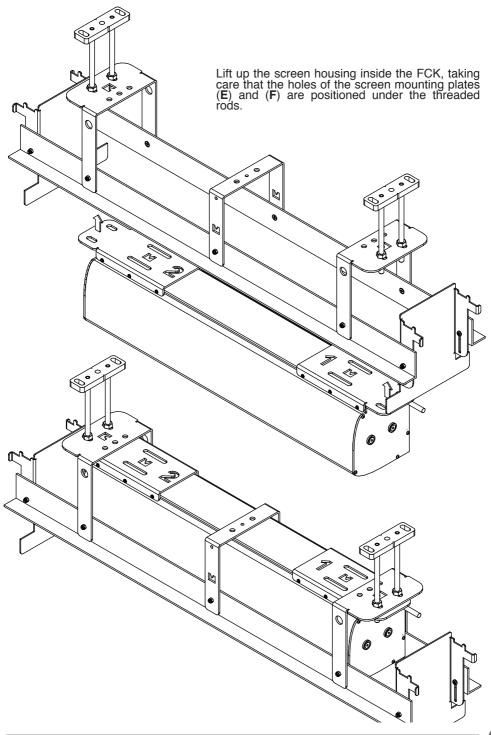

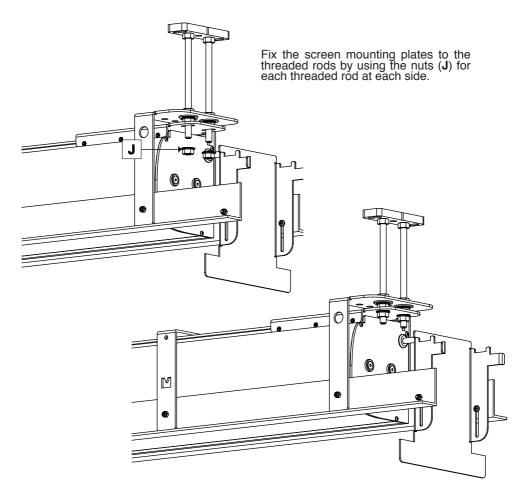

Before tightening the nuts, please check that the housing is perfectly centered with the FCK. Now, tighten firmly the flanged nuts.

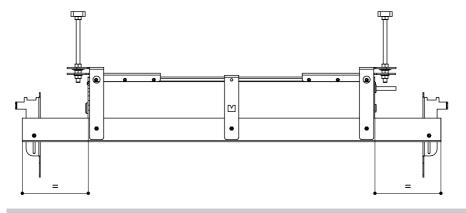

RELEASE ER2024 03 11