


INSTALLATION MANUAL

CEILING TILE HOLDER CT-XL 946

SUITABLE FOR PROJECTOR LIFT MODELS

SI-H XL 300 AND SI-H XL 500

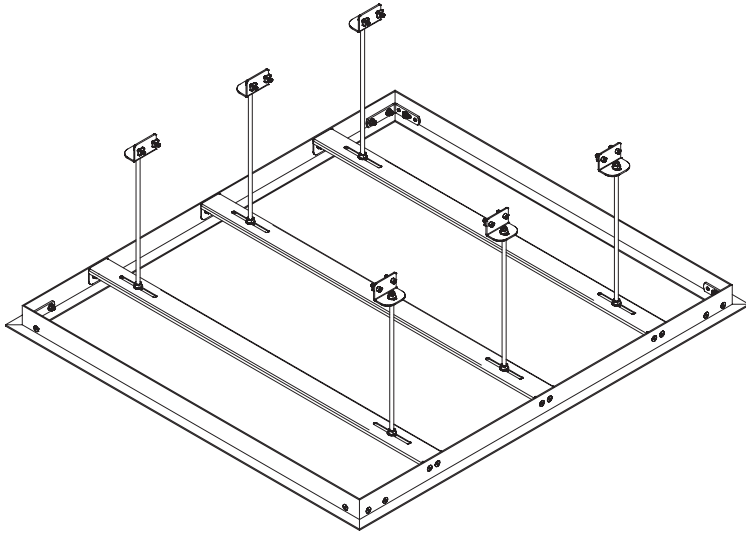


ORIGINAL INSTRUCTIONS IN ITALIAN LANGUAGE


Translation into English language

1.0 PACKAGING CONTENT


Aluminum profiles of the frame (A)

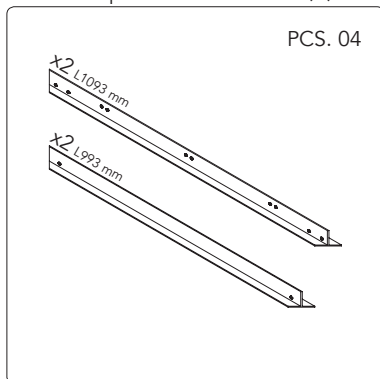


Steel corner brackets, screws and nuts (B)

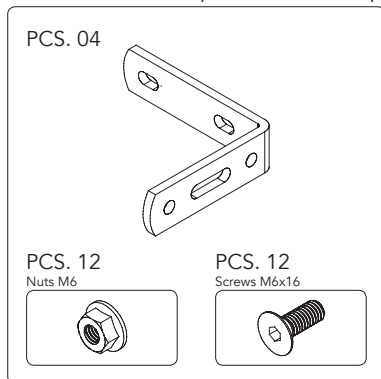


C-shape profiles, screws and nuts (C)

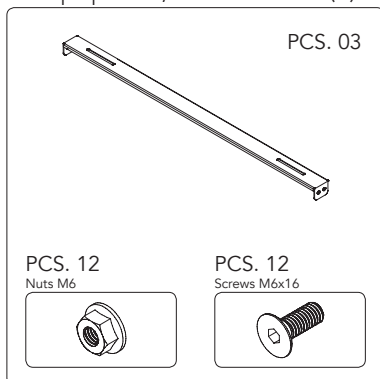


Winded rods, nuts and washers (D)

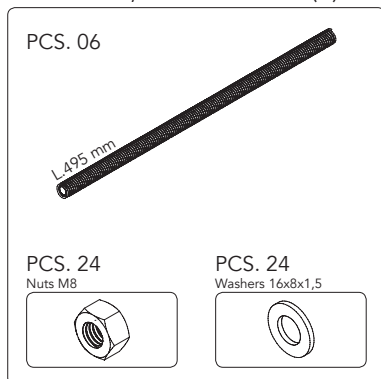

Brackets, screws and nuts Bosch (E)

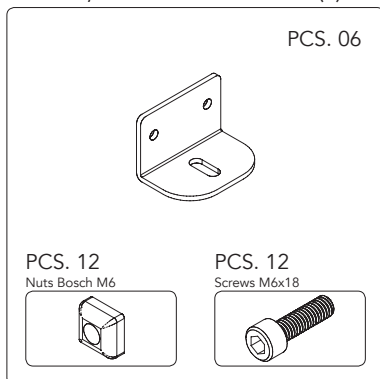


Installation manual

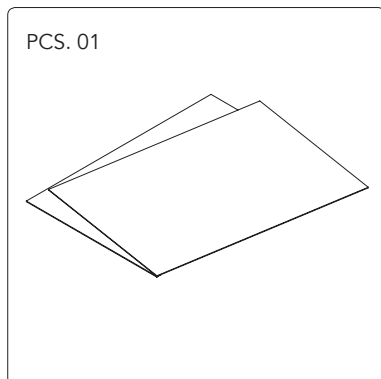


2.0 ASSEMBLY OF THE BEZEL


2.1 Bezel assembly

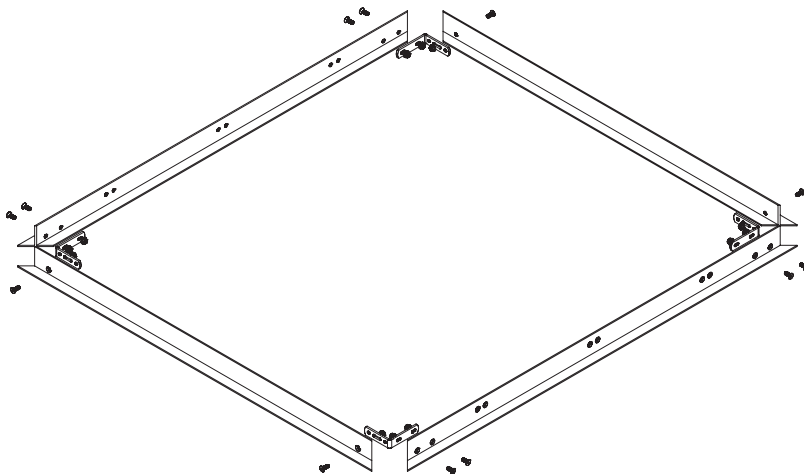


2.2 Assembly detail of the corner

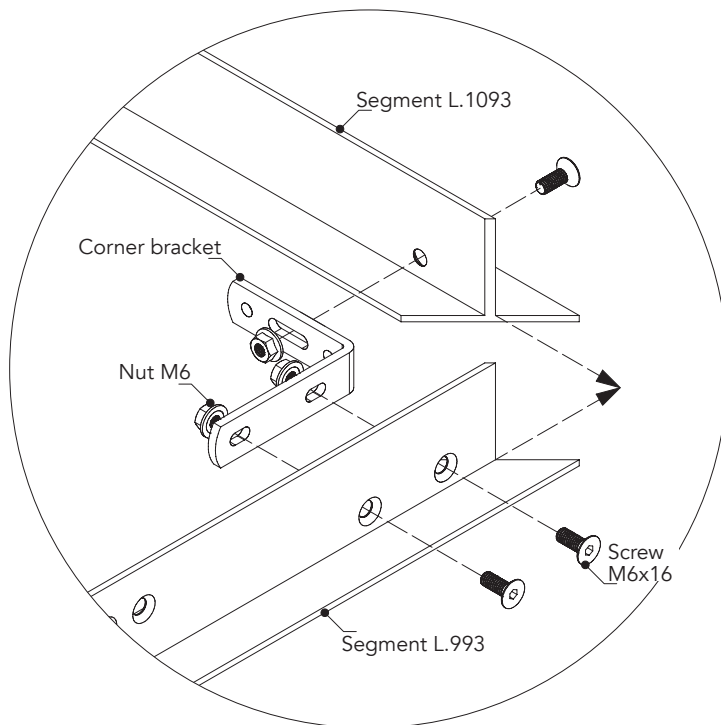

- 2.3 Assembly of the bezel.
Once assembled the bezel, check that L1 has the same length as L2

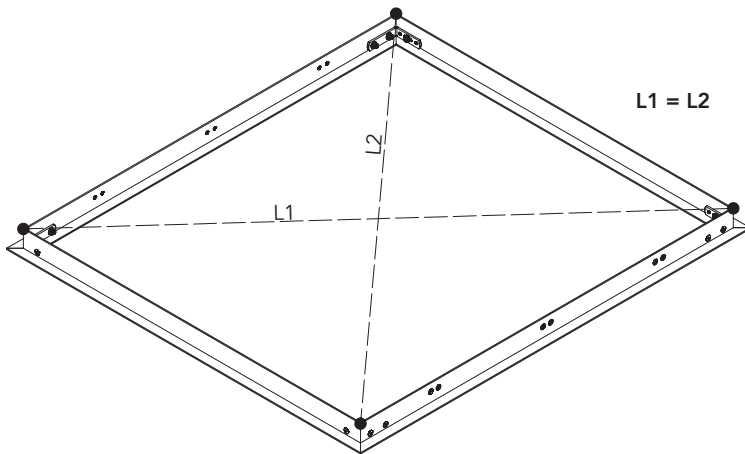


- 2.4 Detail of assembled corner bracket

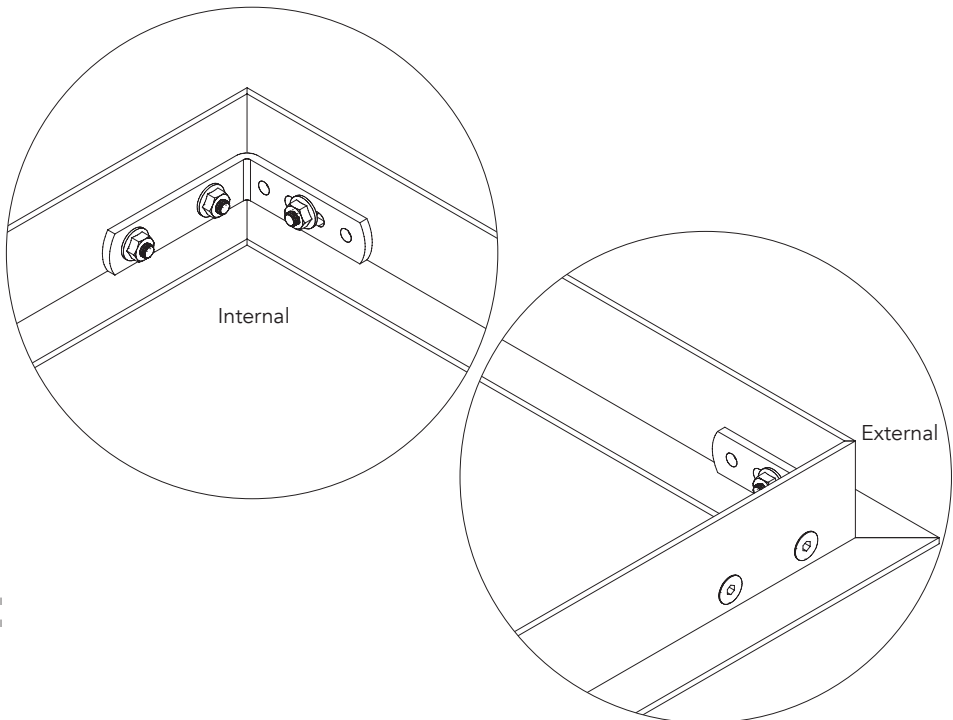


3.0 ASSEMBLY OF THE C-SHAPE PROFILES


3.1 C-shape profiles assembly

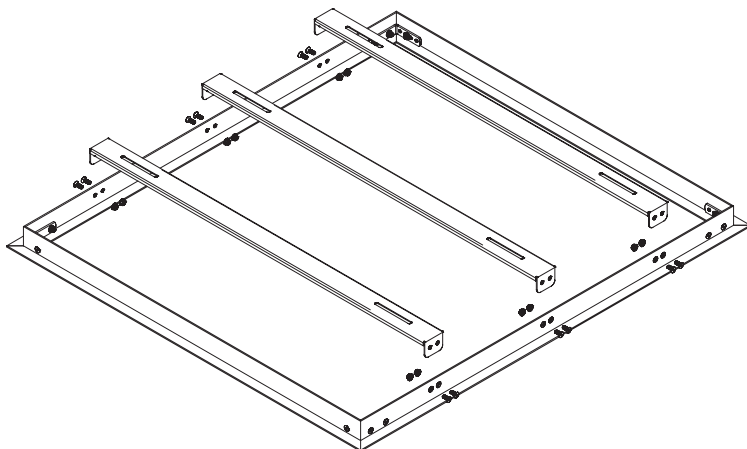


3.2 Detail of the assembly





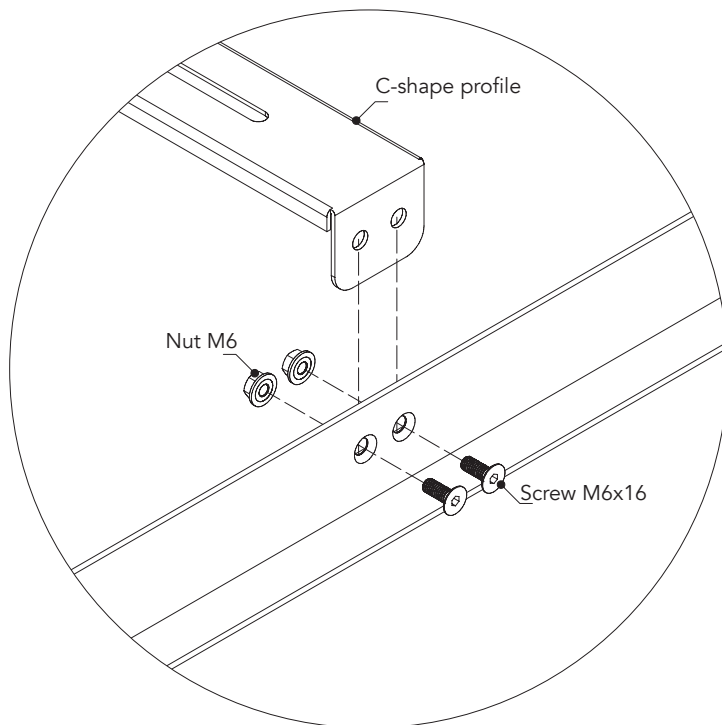


3.3 C-shape profiles assembled

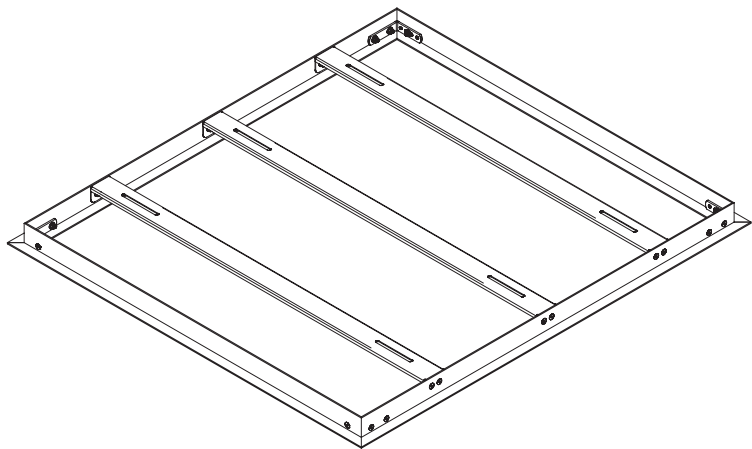


3.4 Detail assembly of the C-shape profile

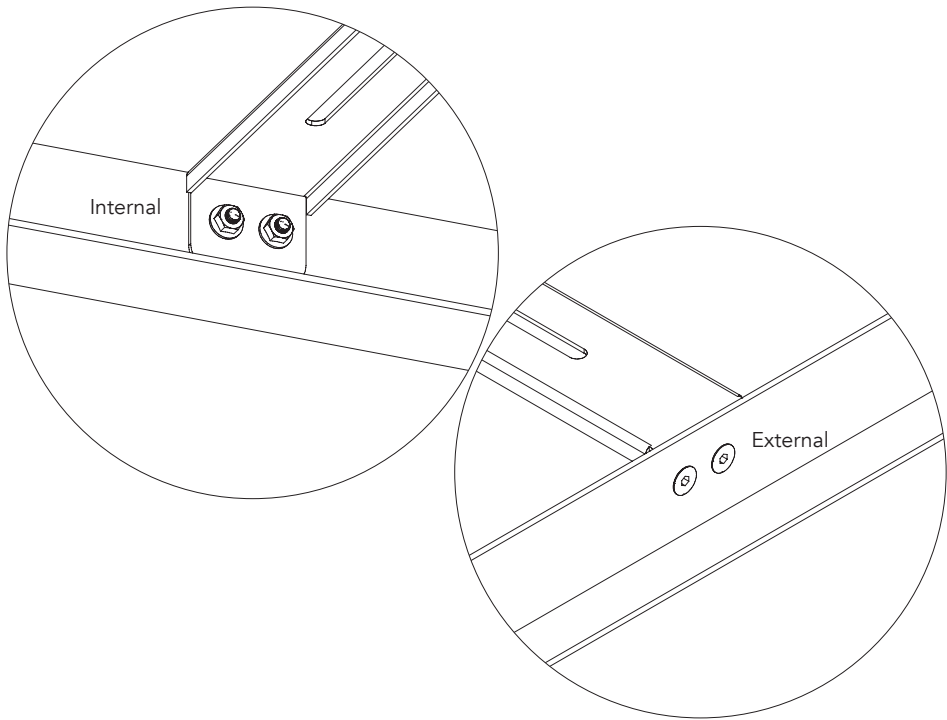


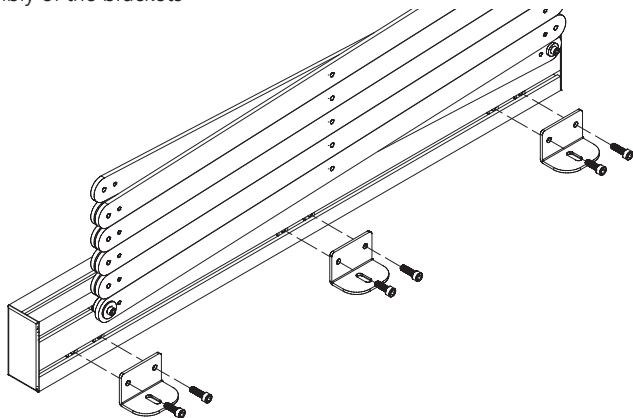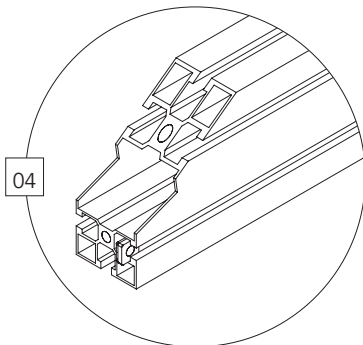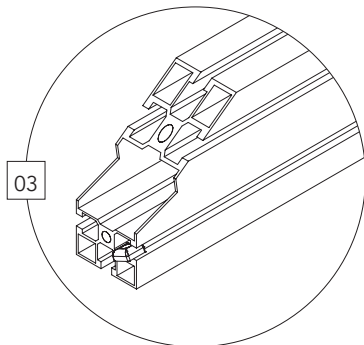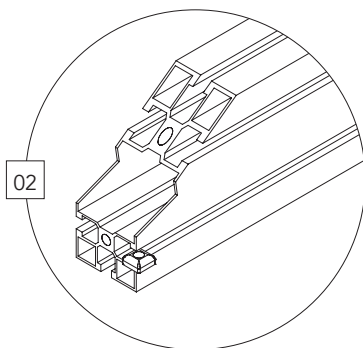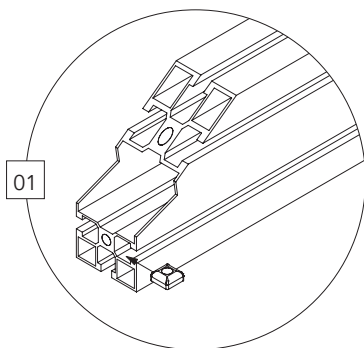4.0 ASSEMBLY OF THE BRACKETS ONTO THE PROJECTOR LIFT FRAME**4.1 Assembly of the brackets****4.2 How to insert the Bosch nut into the spline**

4.3 Fixing detail of the brackets

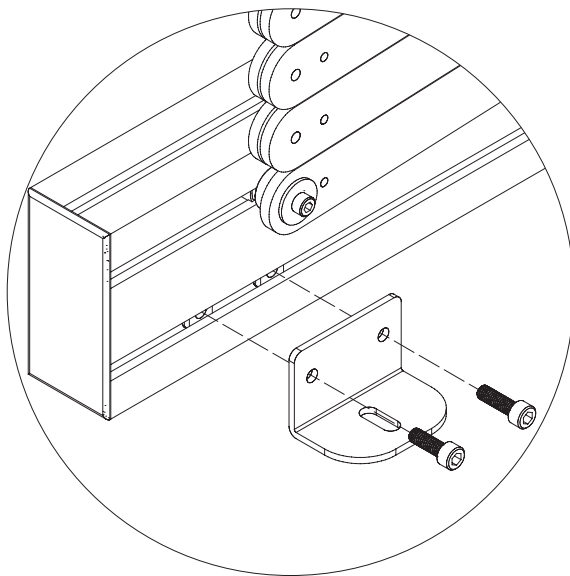


4.4 Detail once the brackets are mounted


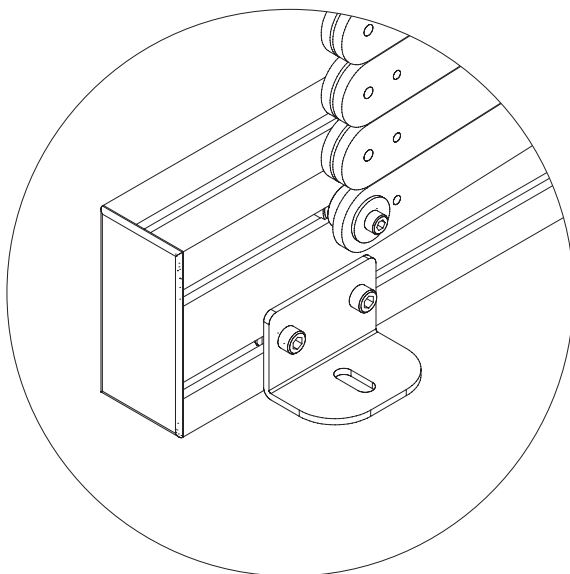


5.0 ASSEMBLY OF THE WINDED RODS

5.1 Overview of the winded rods assembly

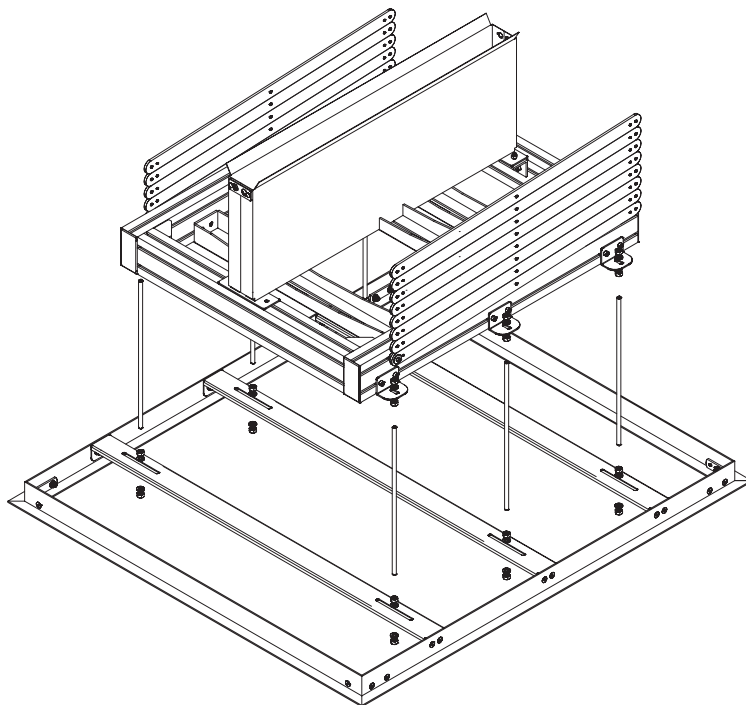

5.2 Assembly detail of the winded rods

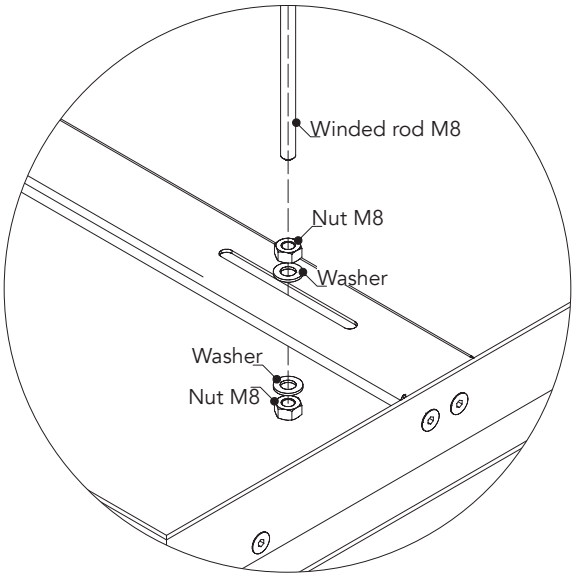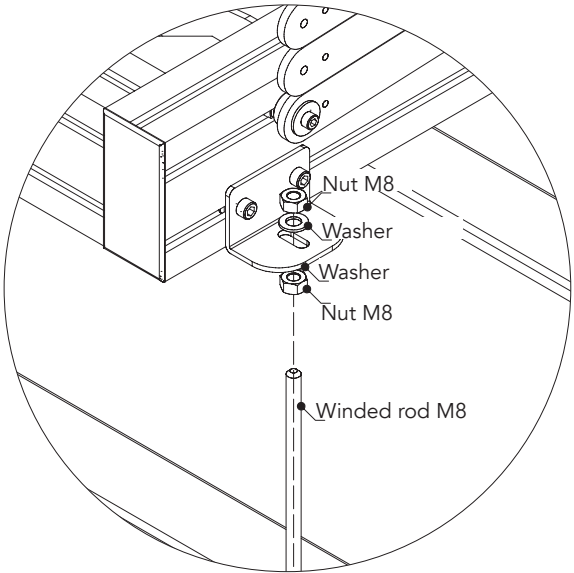

5.3 Detail of the assembled winded rods

