# SCREEN WINCH SYSTEM INSTALLATION MANUAL FOR SCREENS FROM 300 cm. UP TO 450 cm. of width

Before installing the screen winch system, please read the following instructions carefully:



- The screen winch system must be used INDOORS ONLY.
- The screen winch system must be installed by qualified personnel only.
- AFTER UNPACKING THE SCREEN WINCH TAKE CARE THAT AFTER RELEASING THE PACKAGING FOAM FROM THE TRACTION STEEL CABLES, YOU HAVE TO MOUNT THE BEAM UNDER THE STEEL CABLES. THIS IN ORDER TO PREVENT THAT THE STEEL CABLES RAVEL UP INSIDE THE WINCH HOUSING.
- NEVER CONNECT MORE THAN ONE MOTOR TO THE SAME SWITCHER. USE THE SUPPLIED SWITCHER ONLY.
- NEVER CONNECT SCREEN WINCH MOTOR AND SCREEN MOTOR TO THE SAME SWITCHER.
- IN CASE OF MAINTENANCE, UNPLUG THE POWER SUPPLY.
- In case the screen is controlled via optional interfaces:
- The optional interfaces has to be supplied by ScreenInt or by a well-known tubular motor manufacturer
- Take care that the control system is programmed so there is no tension on the interface output for at least 1 sec. during switching between rolling up and rolling down operations and viceversa.
- IT IS FORBIDDEN TO OPERATE SCREEN WINCH SYSTEM AND PROJECTION SCREEN SIMULTANEOUSLY (RISK OF PERMANENT DAMAGES TO BOTH MOTORS).

ACTIVATION OF SCREEN WINCH SYSTEM AND PROJECTION SCREEN: A – ROLL DOWN

- ROLL DOWN FIRST THE SCREEN WINCH UNIT TILL THE DESIRED HEIGHT AND CUT THE POWER TO THE SCREEN WINCH MOTOR.
- ROLL DOWN THE PROJECTION SCREEN TILL ITS BOTTOM END STOP AND THEN CUT THE POWER TO THE SCREEN MOTOR.

#### **B-ROLL UP**

- ROLL UP FIRST THE PROJECTION SCREEN AND THEN CUT THE POWER TO THE SCREEN MOTOR.
- THEN ROLL UP THE SCREEN WINCH UNIT TILL ITS CLOSED POSITION AND CUT THE POWER TO THE SCREEN WINCH MOTOR.
- Incorrect use of the screen winch system, including exceeding the maximum lifting weight of 36 kg., would be dangerous and invalidates the warranty.
- Do not try to disassemble the screen winch or to paint the housing, as these operations will invalidate the warranty. In case you need a different housing colour, please check with ScreenInt as we have this option available.
- Half-yearly the screen winch system has to be checked. Please see check register on page 7 of this document.
- It is forbidden to stay under the screen winch system.
- For any repairing, please contact directly the dealer you purchased the unit from.

The manufacturer and his agents do not take responsibility for any damage to property or personal injury if the winch is installed/used outside of recommended specifications.



This product uses a 230 V AC motor. DO NOT attempt to carry out repairs to the motor, there are no user serviceable parts.

Incorrect servicing could lead to risk of electric shock. For any repairing, please contact directly the dealer you purchased the unit from. In the event of a fault please contact the dealer /supplier. Warranty is 24 months Return To Base.

#### **WARRANTY CONDITIONS**

This screen winch system is guaranteed 2 years from the purchase date for manufacturing defects and 5 years on motor defects.

Responsibility is limited to repairing or substitution of the defected components and without any other charge at our expense.

Warranty is officially voided if the screen winch has been dismantled or it is returned with collision damage or defective due to incorrect installation. Repairs must be carried out by an Approved ScreenInt Certified Engineer.

Warranty is officially voided if (all the following cases are including but not limited):

- 1) defects not due to deficiencies in the material or workmanship;
- 2) amendments, alterations, repairs or disassembling of the Product not previously authorized in writing by Screenint;
- 3) installation, use or maintenance of the Product not in compliance with Screenint 's instructions as set forth in this Installation Manual and/or in any other technical documentation supplied together with the Product;
- 4) bad and/or improper and/or not in compliance installation, maintenance, negligence, improper use:
- 5) use of non-original spare parts or not authorized in writing by Screenint;
- 6) normal wear and tear;
- 7) the motor is removed / dismantled;
- 8) the screen winch system has been damaged in transit;
- 9) the instructions regarding the electrical connections have not been followed;
- 10) the products have to be installed following the electric regulations (CEI) and the other local specific laws;
- 11) in the installation are used electric interfaces that does not allow the correct time lapse between up and down operation (complete cut down of electric power on both phases for one second)
- 12) electrical accessories have been used that are incompatible with the screen winch motor causing damage to its internal components;
- 13) the sticker regarding the serial number of the product has been altered, deleted, removed or tampered.

#### **TECHNICAL SPECIFICATIONS**

Motor: Power 60 Nm Speed 11 rpm Consumption 265 W

Roll down speed: 19 sec. per metre

Net weight of the Screen Winch System: kg. 40

Maximum roll down stroke: 7 mt.


Maximum load that can be hung to the beam: kg. 36

### **SUPPLIED EQUIPMENT LIST:**

When you open the packaging, please **CHECK** that it contains **ALL** the components below:

- 1. 1x SCREEN WINCH SYSTEM
- 2. 1x BEAM
- 3. 1x UP/DOWN SWITCH
- 4. 1x CABLE COILER
- 5. 3x FIXING BRACKETS FOR FIXING THE SCREEN WINCH TO THE CEILING
- 6. 3x BRACKETS FOR FIXING THE SCREEN TO THE BEAM

- 7. 1x L-FORM BRACKET
- 8. 1x CONNECTOR BOX
- 9. 1x INSTALLATION MANUAL

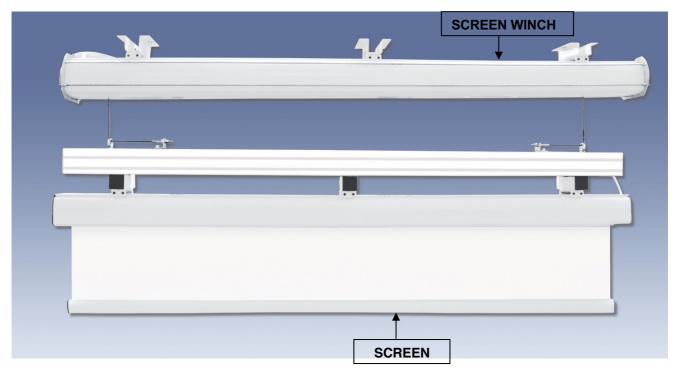

This Screen Winch System is made to lift the screens models COMPACT – MAJOR – ELLIPSE and E-LITE manufactured by Euroscreen SRL.

In order to mount this winch system and the projection screen, please read **carefully** the following instructions:

- 1. First of all fix to the ceiling the 3 brackets for the screen winch, taking care that these 3 brackets are perfectly aligned and also mounted horizontally. From the central bracket, the left and right brackets have to be mounted at 98 cm distance from the central bracket. (see Fig. 1). Each bracket has to be mounted to the ceiling like showed in Fig. 2 with 4 suitable screws or bolts (**fixings are not supplied**).
- 2. Fix the screen winch (seen from the front with the power cable at the right side of the housing) at the brackets as shown in Fig. 3. First move the clamps close to the winch housing and tighten the nuts inside the bracket as shown in Fig. 3. Now in order to secure the clamps, tighten the 2 front screws of the bracket like shown in Fig. 4.





Fig. 2



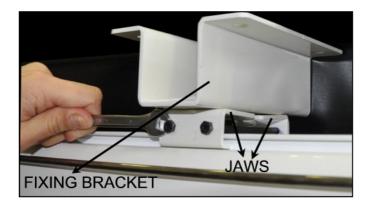


Fig. 4

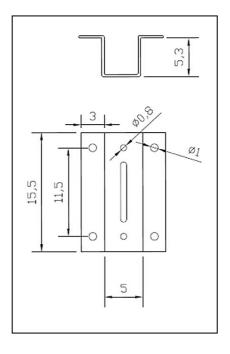

Drawing of the bracket for fixing the screen winch system to the ceiling

- 3. Now connect the power cable of the screen winch to the 220V mains. The winch is equipped with a safety device that will prevent the roll down of the winch in case that the traction parts of the motor will fail.
  - For the electrical connection of screen winch system, safety device and screen, see schematic diagram below.

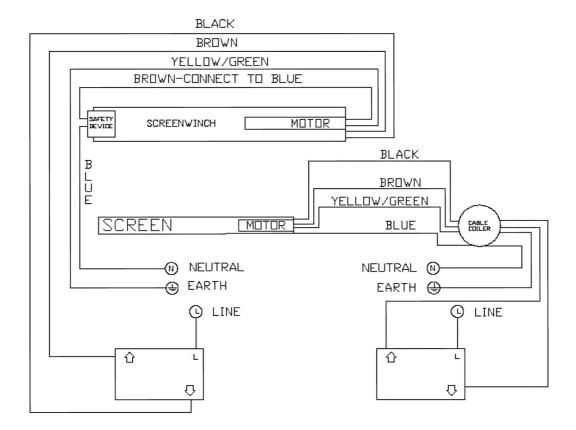

# IF, AT THE FIRST OPERATION, THE SCREEN WINCH WILL NOT ROLL DOWN, IT IS LIKELY THAT THE SAFETY SYSTEM IS IN LOCKED MODE; THIS CAN BE CAUSED DUE TO ROTATION OF THE SCREEN WINCH DURING TRANSPORT.

In order to check the safety system, follow the next steps:

- Remove the safety system unscrewing the four screws and pull out it from the winch.
- Manually rotate the central square hole by using your finger, in both directions, taking care that **position TOP** is on the upper part (see picture below).
- Reposition the safety system in the original position, taking care to keep **position TOP** is on the upper part and fix it again with the four original screw.



- 4. Take now the beam and position it under the screen winch, taking care that the front (indicated) of the beam is in the correspondence of the front of screen housing. Take the steel cables coming out of the screen winch and go through the eyebolt and fix them to the L-form bracket, at the beam as shown in Fig.6.
- 5. At the bottom side of the beam you have to mount the remaining 3 brackets (see Fig. 5). Take care that the left bracket has to be mounted at 20 cm. from the left end side of the beam and the right racket has to be mounted at 20 cm. from the right hand side of the beam. Now fix the screen housing at these brackets taking care that the power cable of the screen is at the right side of the housing.



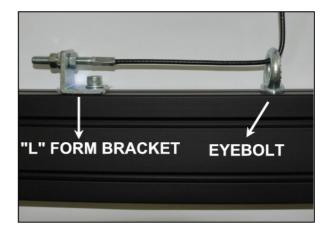


Fig. 5 Fig. 6

- 6. With the winch completely rolled up, you have to adjust the screws fixed on the L-form brackets, which are fixed on the beam (see fig. 6) so that the beam is perfectly horizontal and check also that the steel cables from the winch to the beam are perfectly in vertical position. In case the steel cables are not perfectly vertical, please move the metal ring on the beam, left or right in order to position the steel cable vertically. In case you have moved the eyebolt, check carefully that you fix it again sturdy to the beam.
- 7. To connect the mains 220V to the screen, you have to use the cable coiler that is included in the packaging. Mount the cable coiler to the ceiling behind the screen winch housing at the right side (see Fig. 6B), using suitable screw anchors (**fixings are not supplied**).



Fig. 6B - CABLE COILER

8. Now fix at the rear side of the beam the L form bracket as indicated in Fig. 7 and fit the output power cable of the screen winch through the bracket and fix it with two wire clamps as shown in Fig.7 in order that it remains fixed when the beam moves up and down. At this step, you have to connect to the incoming power cable of the cable coiler fixed at the ceiling a plug and connect it to the mains up in the ceiling.

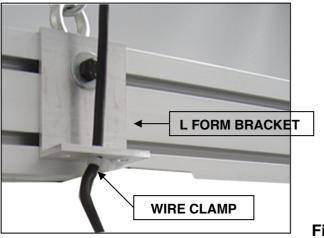


Fig. 7

9. Now fix the power connector box to the beam the as shown in Fig. 8 and connect the end of output power cable of the cable coiler to the power cable that comes out of the screen housing.



Fig. 8

10. At this step, you have to connect the incoming power cable of the cable coiler to the mains 220V (see page 3).

**WARNING:** Once you have installed the product, when you switch on the Screen Winch System you will hear a rhythmical ticking which means that the safety device is working properly.



## END STOP ADJUSTMENT OF THE SCREEN WINCH

WARNING: THE END STOP ADJUSTMENT HAS TO BE DONE CAREFULLY, OTHERWISE THE SCREEN WINCH CAN BE DAMAGED PERMANENTLY.

THE UPPER END STOP IS FACTORY PRESET AT THE HIGHEST POSSIBLE HEIGHT – <u>DO NOT ATTEMPT TO RAISE IT MORE.</u>

THE BOTTOM END STOP IS FACTORY PRESET AT A FEW CENTIMETRES OF DROP. Should the screen winch roll down more than 1 mt., check the status of the motor switchers.

ON THE STEEL CABLE MOTOR HAND SIDE OF THE SCREEN WINCH SYSTEM, THERE IS, AT 680 CM. DROP, A WHITE TAPE WHICH INDICATES THAT THE WINCH HAS NEARLY REACHED THE MAXIMUM EXTENT, <u>THEREFORE STOP IMMEDIATELY</u> THE WINCH.

AT 700 CM. DROP, A SECOND WHITE TAPE IS APPLIED ON THE SAME STEEL CABLE; THIS INDICATES THAT THE MAXIMUM EXTENT OF THE WINCH HAS BEEN REACHED. DO NOT GO FURTHER.

In case the bottom end stop is set lower than 7 mt., there is a DANGER OF FALLING DOWN OF THE PROJECTION SCREEN HOUSING AND PERMANENT DAMAGE OF THE SCREEN WINCH SYSTEM.

Once you receive the winch, you will find the switchers in locked position (CHECK BEFORE ACTIVATING).

In case, after installation, the end stops of the Screen Winch System need to be changed, please, proceed as follows:


- at the right side of the Screen Winch System, in the lower part of the cabinet you will find two round holes;
- as shown in the figure below:
  - "1" indicates switcher for setting of the bottom end-stop position
  - "2" indicates switcher for setting of the upper end-stop position



End Stop settings buttons LOCKED



End Stop settings buttons UNLOCKED

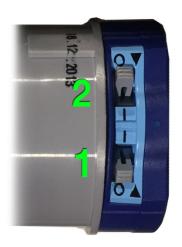

WARNING: Once the switchers are unlocked, the motor can move freely without any end stop set.

- In order to modify the **lower end-stop position**, move the switcher "1" in position "0", move the screen winch to the desired height and set switcher "1" in position "I", as shown on the figure above.
- In order to modify the **upper end-stop position**, move the switcher "2" in position "0", move the screen winch to the desired height and set switcher "2" in position "I", as shown on the figure above.

DO NOT TRY TO HIGH UPPER END-STOP, OTHERWISE THE SCREEN WINCH SYSTEM CAN BE DAMAGED PERMANENTLY AND THE WARRANTY WILL BE VOIDED.

WARNING: do not change the end stops of the projection screen, otherwise you will invalidate the warranty on the screen.

		SCREEN WINCH SYSTEM - CHECK REGISTER		
SCREEN WINCH SYS	STEM PURCHASE DATE:			
HALF-YEARLY CHECK DATE	YEARLY CHECK DATE	CHECK RESULT (POSITIVE - NEGATIVE)	NOTES	
HALF-YEARLY CHECK	Check if rolling up and rolling down is working properly, without frictions or decelerations.			
	Check that if you can hear the ticking noise of the safety brake is present.  Check with the end user that projector lift and projection screen (if this is the configuration)  operate in different times (not at the same time).			
YEARLY CHECK	Check steel cables covered	neck steel cables covered by black PVC – no steel wires have to be visible outside the black PVC scabbard.		
	Check of the ceiling fixing brackets of the screen winch system  Check that the end stops are set properly, so that in the rolled down position (screen winch system completely open) it remains at least 3 turns of steel wire onto the roller tube.			
	Check that bolts on the bottom ends of the steel cables are tightly fixed.			
		Check if rolling up and rolling down is working properly, without frictions or decelerations.  Check that if you can hear the ticking noise of the safety brake is present.  Check with the end user that projector lift and projection screen (if this is the configuration)  operate in different times (not at the same time).		